



soniclear elite™

by MICHAEL TODD BEAUTY

World's First

SONIC SKIN CLEANSING SYSTEM

with "Clean and Fresh" Brush Protection
Against Microbial Contamination

INSTRUCTIONS
FOR USE

MICHAEL TODD

CONGRATULATIONS

Dear Customer,

Thank you and congratulations on choosing Michael Todd Beauty's soniclear *elite*, one of the most sophisticated and reliable skin cleansing devices on the market today. We are confident it will bring you years of enjoyment.

soniclear *elite* is the world's first antimicrobial sonic skin cleansing system. With its exclusive built-in LIFE antimicrobial product protection, the soniclear *elite*'s brushes will stay cleaner, fresher for longer. An industry first, traditional sonic skin cleansing systems don't provide this protection.

The soniclear *elite* also uses advanced sonic wave technology to gently yet thoroughly cleanse your skin with up to 18,000 micro-massage movements per minute.

6 Cleansing speeds and 2 operating modes enable you to customize your cleansing experience to your specific skin concerns, including patent pending C-Boost™ Technology, another first, to stimulate circulation. Also included are interchangeable antimicrobial Face and Body brushes to allow you to further customize your cleansing experience.

soniclear *elite* is cordless and waterproof for use in the shower or bathtub, and features soft, hand grips - another industry first - to prevent slipping in the user's hand.

Meet your new favorite skin cleansing tool! Once you've tried soniclear *elite*, you will not want to imagine your beauty routine without it.

READ ALL INSTRUCTIONS BEFORE USE
AND SAVE FOR FUTURE REFERENCE

REGULATORY INFORMATION

U.S. This Class B digital product complies with Part 15 of the U.S. Federal Communications Commission (FCC) rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Canada. This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference and (2) this device must accept any interference including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

Mfg: Michael Todd Beauty

Model: *soniclear elite*

Device complies with

CAN ICES-3 (B)/NMB-3(B)

For home or office use. Not intended for use in machinery, medical or industrial applications.

Radio and TV Interference Regulations.

This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency (RF) energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications devices (such as televisions, baby monitors, cordless phones, etc). However, there is no guarantee that RF interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antennae of the other radio-communications device
- Move the equipment farther away from the radio or tv
- Connect the product into an outlet on a circuit different from that to which the other device is connected
- Consult the manufacturer's customer service or an experienced radio/tv technician for more suggestions.

IMPORTANT SAFETY INFORMATION

BASIC SAFETY PRECAUTIONS. THIS PRODUCT IS NOT DESIGNED OR INTENDED PRIMARILY FOR CHILDREN 12 YEARS OF AGE OR YOUNGER. When using electrical products, especially when children are present, basic safety precautions should always be taken. IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU ARE WRONG. If the plug is in, the power is on. Unplug electrical appliances when you are not using them.

DANGERS. To reduce the risk of electrocution:

1. **DO NOT** place or store the Charging Cradle where it can fall or be pulled into a tub or sink.
2. **DO NOT** place the Charging Cradle in or drop it or the plug into water or other liquid. The Charging Cradle is not for immersion or for use in the shower or bath.
3. **DO NOT** reach for the Charging Cradle or the plug that has fallen into water. Unplug immediately.
4. **DO NOT** use soniclear *elite* where the power cord while plugged in can come in contact with water.
5. Keep soniclear *elite* away from open flame or flammable aerosol products. soniclear *elite* is not suitable for use in the presence of a flammable anesthetic mixture with air or oxygen or nitrous oxide.

WARNINGS. To reduce the risk of burns, electrocution, fire or injury to persons:

1. Close supervision is necessary when this product is used by, on, or near children or physically challenged persons.
2. Use this product only for its intended use as described in these Instructions for Use. **DO NOT** use attachments other than those recommended and provided by MICHAEL TODD BEAUTY.
3. Keep the power cord away from heated surfaces.
4. Never use soniclear *elite* while sleeping or drowsy.
5. **DO NOT** use soniclear *elite* outdoors or where oxygen is being administered.
6. Never operate soniclear *elite* if it is damaged.
7. **DO NOT** use the Charging Cradle for recharging if the power cord or plug is damaged, the Charging Cradle is not working properly, or if the Charging Cradle has been dropped on the ground or into water.
8. The Handle and Charging Cradle have no serviceable parts. Never attempt to open the Handle for any reason. If the Charging Cradle cord is damaged, it must be unplugged and replaced. Contact customer service at 772.800.7654 or email us at customerservice@michaeltoddbeauty.com for instructions on how to obtain a replacement.

9. Use soniclear *elite* with the supplied power adapter only.

IMPORTANT CAUTIONS.

1. soniclear *elite* is not a medical device and is not intended to treat medical conditions. If you are under a doctor's care for any skin condition, if you think you may have a skin condition or if you have very sensitive skin, consult your physician before using soniclear *elite*.
2. The built-in antimicrobial product protection in soniclear *elite* brushes is neither a substitute for good hygienic practices nor intended to protect the user from microorganisms that cause disease. Clean the Heads with warm soapy water before and after each use and do not share the Brush Heads for sanitary reasons.
3. soniclear *elite* uses magnets which may affect internal medical devices such as pacemakers. Keep away from internal medical devices. To avoid damage, keep magnetic media such as computer discs, credit cards and tapes away.
4. If you experience any pain or discomfort from using soniclear *elite*, discontinue use and consult a physician.
5. To avoid risk of injury, we **DO NOT** recommend using soniclear *elite* around the eye area.

CONTENTS

Your soniclear *elite* comes with the following:

1. Waterproof Rechargeable Sonic Control Handle with C-Boost™ Technology
2. Antimicrobial Face Brush Head Attachment
3. Antimicrobial Body Brush Head Attachment
4. Charging/Storage Cradle



GETTING TO KNOW YOUR SONICLEAR *elite*




SONICLEAR *elite* FEATURES



INCLUDED ACCESSORIES. soniclear *elite* comes with the following accessories:

- An Antimicrobial Brush Head designed for gentle facial cleansing
- A larger and firmer Antimicrobial Brush Head for body cleansing
- A storage/drying and recharging cradle to hold your soniclear *elite* between uses

ACCESSORIES SOLD SEPARATELY. We are constantly creating innovative accessories to use with soniclear *elite*. For a complete list of soniclear *elite* accessories, please visit our website at www.michaeltoddbeauty.com

PEDI TREATMENT HEAD. Available for purchase separately: Pedi Treatment Head to smooth rough or callused skin of the feet, as well as elbows and knees.


1. Before using the Pedi Treatment Head with soniclear *elite*, you should acquaint yourself with the general instructions for using soniclear *elite* under the Operating Instructions for the Face and Body.
2. The Pedi Treatment Head is specially designed to remove rough patches of dead skin on the feet. However, it may also be used to remove similar rough patches of skin on the elbows and knees. To avoid injury, DO NOT use the Pedi Treatment Head anywhere on the body other than the feet, elbows or knees.
3. Attach the Pedi Treatment Head and turn the soniclear *elite* on . The Pedi Treatment Head is intended to be used on dry skin and therefore should not be used in the bath or shower.


4. Starting with the lowest speed setting, gently press the Pedi Treatment Head against thickened rough patches of dead skin on your feet, elbows or knees using small circular or short back and forth motions. Do not to apply too much pressure. Allow the sonic wave power to do most of the work. As you get used to using the Pedi Treatment Head, you may gradually increase the speed  or activate the C-Boost™ Technology  for greater smoothing effect.
5. soniclear *elite* will beep every 20 seconds to signal you to inspect the effect of the treatment or move to another treatment area. To avoid injury, DO NOT continue using the Pedi Treatment Head on an area once the thickened rough patches of dead skin are removed. You may have to adjust the amount of time spent on each treatment area depending upon the severity of your rough patches.
6. When you have completed your smoothing treatment, rinse with warm water, dry the skin with a clean towel and apply a moisturizer to the fresh skin revealed by the smoothing treatment.

ANTIMICROBIAL PROTECTION. soniclear *elite* Face and Body Brush Heads utilize our exclusive built in LIFE antimicrobial product protection. Safe, effective and long lasting, the antimicrobial protection will not wash out or wear off for the normal life of the Brush Heads so the brushes stay cleaner, fresher for longer. Traditional face cleansing systems do not provide this protection.

WATERPROOF. soniclear *elite* is waterproof (not merely water resistant) for use in the bath or shower.

NON-SLIP COMFORT GRIPS. soniclear *elite* features soft hand grips for increased comfort and to prevent slipping in the user's hand.

SIX SPEED OPTIONS . soniclear *elite* has 6 speeds for the speed just right for you: 3 speeds (low, medium and high) with the C-Boost™ Technology feature activated and 3 speeds without the C-Boost feature activated.

C-BOOST™ TECHNOLOGY . soniclear *elite* provides an adjustable C-Boost™ Technology feature that can be activated with all the Attachment Heads. C-Boost™ Technology provides a stimulating adjustable pulsing massage that adds to the cleansing experience by stimulating blood flow to the skin's surface.

CLEANSING TIMER. For even and thorough cleansing, the soniclear *elite* features a built in automatic timer that beeps at 20 second intervals to indicate it is time to move to another cleansing area.

CORDLESS; RECHARGEABLE. soniclear *elite* is cordless and rechargeable and can provide up to 60 minutes of continuous use between charges.

LIFE® ANTIMICROBIAL PRODUCT PROTECTION

Protection Against Stain and Odor Causing Bacteria



The inventors of soniclear *elite* recognized that skin cells and moisture remaining on the Brush Heads between uses can create conditions for bacteria to grow. So the soniclear *elite* Brush Heads are treated during the manufacturing process with proprietary LIFE® antimicrobial product protection - a soniclear *elite* exclusive - to guard against the growth of stain and odor causing bacteria. Traditional skin cleansing systems do not provide this protection.



The antimicrobial protection in soniclear *elite* is registered with the US Environmental Protection Agency to guard against stain and odor causing bacteria on the Brush Heads of your soniclear *elite*. Safe, effective and long lasting, this antimicrobial product protection will not wash out or wear off for the normal life of the Brush Heads so the brushes stay cleaner, fresher for longer!


Antimicrobial product protection is not a substitute for good hygienic practices nor is it intended to protect the user from disease causing microorganisms. We recommend that you clean the Brush Heads with warm soapy water before and after each use and not share Brush Heads for sanitary reasons.

OPERATING INSTRUCTIONS

FACE AND BODY

1. We recommend that you start with one of our MICHAEL TODD BEAUTY's cleansers or scrubs optimized for gentle daily use with soniclear *elite*. soniclear *elite* may be used with exfoliating scrubs with soft, rounded particles but we do not recommend using the soniclear *elite* with scrubs containing jagged exfoliating particles such as shells.
2. Before using soniclear *elite* for the first time, charge the Handle for 24 hours. See CHARGING Instructions.
3. We do not recommend using soniclear *elite* in the eye area.
4. Attaching/Removing Attachment Heads:
 - soniclear *elite* must be in OFF mode to change Attachment Heads.
 - To attach a Head to the Handle, hold the Head by the outer edge, then push down and twist clockwise until it snaps into place. Listen for a tight snap indicating the Head is locked in place.
 - To remove the Head, grip it firmly, push down and twist counter-clockwise then pull the Head away from the Handle.
 - Tip: Use the Head cap to easily remove and attach the Heads with a simple twist.

5. Starting: Press the ON/OFF Button to turn on 
6. Selecting Speeds: To customize cleansing for your specific skin type and concerns, soniclear *elite* provides a choice of 6 sonic powered cleansing speeds: 3 sonic speeds (low, medium and high) with the C-Boost™  Technology feature activated and 3 speeds without the feature activated. C-Boost™ Technology is a setting that provides stimulating adjustable pulse/massage at the push of a button for improved circulation.

Through smart technology, when you turn on your soniclear *elite* it will default to the last speed that was used prior to shutting the unit off. To change speeds, press the Speed Button  while your soniclear *elite* is on. Speed is indicated visually by the two red Speed Indicator Lights on the Handle above the Power, Speed and C-Boost™ Buttons.

To use the C-Boost™ Technology feature , turn on the soniclear *elite*  and press the C-Boost™ button , then select the desired C-Boost™ speed by repeatedly pressing the Speed Button  until the desired speed is achieved as indicated by the two red blinking Speed Indicator lights on the Handle above the Power, Speed and C-Boost™ Buttons.




Speed	Light
BASIC SONIC CLEANSING	
High speed	Both red lights on
Medium speed	Top red light on
Low speed	Bottom red light on
C-BOOST™	
High speed	Bottom red light blinking
Medium speed	Top red light blinking
Low speed	Both red lights blinking

7. Basic Sonic Cleansing: Suggested guidelines:

- Low speed – (Bottom red light on) This speed provides gentle cleansing action.
- Medium – (Top red light on) This speed is intended for all skin types and provides normal sonic cleansing.
- High – (Both red lights on) This speed is intended for all skin types except sensitive and provides maximum sonic body cleansing.

C-Boost™ : Suggested guidelines

- Low speed – (Bottom red light blinking) This setting provides gentle cleansing action with stimulating massage for increased skin rejuvenating benefits.

- Medium – (Top red light blinking) This setting is intended for all skin types and provides normal sonic cleansing with stimulating massage for increased skin rejuvenating benefits.
 - High – (Both red lights blinking) This setting is intended for all skin types except sensitive and provides maximum sonic body cleansing with stimulating massage for increased skin rejuvenating benefits.
8. Cleansing Timer. For even and thorough cleansing, soniclear *elite* features a built in automatic timer that beeps every 20 seconds to indicate it is time to move to another cleansing area.
 9. Cleansing. To cleanse, wet your skin and the Brush Head with warm water. Apply cleanser to your skin or the Brush Head. Turn the soniclear *elite* on  and select the desired speed  and operating mode. Place the Brush Head flush to the skin and gently move in small circular motions. Note: Do not press hard. The sonic micro- massaging action of the Brush Head will perform the cleansing at up to 18,000 oscillation movements per minute. Pressing too hard will impede the motion and reduce the effectiveness of the cleansing.
 10. Stopping. soniclear *elite* can be stopped at any time by pressing and holding the ON/OFF Button  for approximately 1 second.
 11. When finished, rinse with warm water and dry skin with a clean towel.
 12. Wash your brush in warm soapy water and rinse any residue from your soniclear *elite* handle.

CHARGING


1. Your soniclear *elite* is powered by a rechargeable battery. Recharge the battery only as needed in the Universal Charging Cradle that comes with your soniclear *elite*. It is not necessary or recommended that the soniclear *elite* be recharged after each use. Depending on the power setting used the fully charged soniclear *elite* should provide 30-60 minutes of continuous use before needing to be recharged.
2. First Use. Before you use your soniclear *elite* for the first time, you need to charge it fully for 20- 24 hours. For subsequent recharging allow 16-18 hours. **DO NOT** charge your soniclear *elite* for more than 40 continuous hours. A full charge provides up to 60 minutes of continuous use.
3. Universal Charging Cradle. Your soniclear *elite* comes with a universal Charging Cradle to store and recharge the Handle. The universal Charging Cradle is compatible with international and domestic outlets (100-240 Volts AC; 50/60 Hz) with the respective country plug adapter. If the shape of the plug does not fit the power outlet, use an attachment plug adapter of the proper configuration for the power outlet.
4. To charge the soniclear *elite*, plug the power adapter into a wall outlet and plug the DC jack into the back of the Charging Cradle. Place the Handle into Charging Cradle as shown below. The Charge Indicator will light up indicating the unit is charging. The power adapter may become warm in normal operation while charging. Unplug the adapter from the wall and the Charging Cradle when not in use. **DO NOT** unplug the adapter from the wall outlet when it is still connected to the unit as this will cause discharging of the battery.

5. Infrequent Use. The Handle needs to receive a charge occasionally. If you rarely use the Handle, recharge it in the Charging Cradle every 3 months to maintain its charging capability.
6. Charge Indicator. When power is low, the unit will shut off. Return the unit to the Charging Cradle and allow for full charge before reusing.

If the soniclear *elite* is not sitting in the Charging Cradle properly it will fall out. Please see the below picture to insure that the soniclear *elite* is properly sitting in the Charging Cradle.

While the soniclear *elite* is charging, the Charge Indicator will indicate the charge level. Up to 1/3 charged, the first light will flicker. Up to 2/3 charged, the first light will extinguish and the second light will flicker. Up to fully charged, the second light will extinguish and the third light will flicker. When the unit is fully charged, the three Charge Indicator lights will remain lit continuously.

If your soniclear *elite* stops working, charge it in the Charging Cradle for a minimum of 5 hours. If the issue is not resolved, please contact Customer Service.

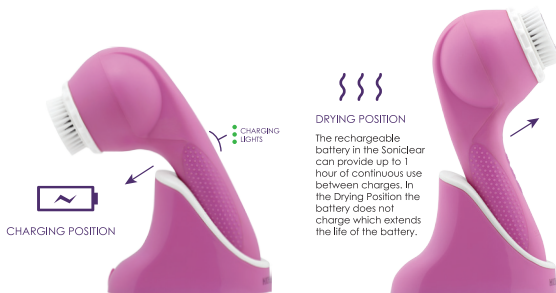

CARE AND MAINTENANCE

1. Handle. The Handle can be cleaned using warm soapy water to remove any dirt or residue buildup. Rinse and dry with a clean cloth.
2. Brush Heads. The Brush Heads are antimicrobial to protect against stain and odor causing bacteria. This protection is safe, effective and long lasting, and will not wash out or wear off for the normal life of the Brush Heads. Traditional sonic cleansing systems don't provide this protection. For optimum results, replace the brushes after 6 months of continuous use.
3. Antimicrobial product protection is not a substitute for good hygienic practices nor is it intended to protect the user from disease causing microorganisms. We recommend that you clean the Brush Heads with warm soapy water before and after using your soniclear *elite* and not share the Brush Heads for sanitary reasons. Each user should have his or her own Brush Heads. Using soniclear *elite* to remove makeup may stain the brush bristles, but will not affect performance.

If discoloration occurs, clean the Brush Head with warm soapy water. We also recommend replacing the Brush Heads after 6 months of continuous use or more frequently should the bristles show wear and become less effective over time.

4. Charging Cradle. **DO NOT** immerse the Charging Cradle in water. Unplug the Charging Cradle before cleaning it. After unplugging the Charging Cradle, wipe with a soft, damp cloth.

5. **DO NOT** clean soniclear *elite* or any of its components using a dishwashing machine.
6. **DO NOT** use abrasive cleaners or chemicals to clean your soniclear *elite*.
7. Storage. When not in use for prolonged periods, store your soniclear *elite* in a dry place at a temperature between 32°F and 140°F (0°C to 60°C).
8. soniclear *elite* does not require any other regular maintenance. If the unit is not working properly, discontinue use and contact Customer Service at customerservice@michaeltoddbeauty.com or call (772) 800-7654.

LIMITED WARRANTY

Please use this as your reference for any customer service or warranty needs you may have in the future.

You must register your product within 90 days of purchase in order to obtain the warranty. Your warranty is not effective unless you register your product within the time provided. In order to register your product go on-line to www.warrantymichaeltoddbeauty.com and complete the information required for registration.

LIMITED 5 YEAR WARRANTY. This limited warranty gives you specific legal rights and you may have other rights which vary from jurisdiction to jurisdiction. Any claim for breach of this limited warranty must be commenced within 5 years following the original purchase.

For a period of five years from the date of purchase, Michael Todd Beauty LP ("MICHAEL TODD BEAUTY") warrants the soniclear *elite* (the "Product") against Covered Defects. If there is a Covered Defect during the warranty period MICHAEL TODD BEAUTY agrees to exchange the Product with a new equivalent Product. This is the sole remedy available for breach of this limited warranty.

The limited warranty begins on the date of purchase and expires 5 years thereafter. In no event is the warranty period tolled or extended - including any period during which the Product (or any parts thereof) is in repair or if the Product is replaced by MICHAEL TODD BEAUTY during the warranty period.

This warranty is limited and applies only to a purchase of the Product from MICHAEL TODD BEAUTY or an authorized reseller, is valid for the original end user of the Product only and cannot be transferred under any circumstances.

Except as otherwise provided by law, to obtain service under this warranty, return the Product with a Covered Defect to us with your purchase receipt and, if you are returning the Product after one (1) year from the date of purchase, \$30 for postage and handling. For shipping instructions, contact our Customer Service department at customerservice@michaeltoddbeauty.com or call (772) 800-7654.

WHAT IS COVERED? "Covered Defects" means damage, defects or failure resulting from ordinary consumer use under normal home conditions according to the instruction manual included with the Product. Covered Defects does NOT include using the Product with a voltage converter; damage, defects or failure caused by misuse or improper care of the Product; impact or insertion of foreign objects into or on the Product; improper storage; improper or incorrectly performed maintenance or repair of the Product; application of harmful chemicals or abrasives to the Product; failure to follow manufacturer's instructions; normal wear and tear; alteration or overuse of the Product; as well as any professional or commercial use of the Product.

WARRANTY LIMITATIONS. THIS LIMITED WARRANTY IS EXCLUSIVE OF ALL OTHER WARRANTIES, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. THERE ARE NO IMPLIED WARRANTIES CREATED BY THE MANUFACTURE, SALE OR USE OF THE PRODUCT.

IN NO EVENT SHALL MICHAEL TODD BEAUTY BE LIABLE FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR INDIRECT DAMAGES BASED UPON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT PRODUCT LIABILITY, TORT OR ANY OTHER LEGAL THEORY.

THESE WARRANTY TERMS, CONDITIONS AND LIMITATIONS ALLOCATE THE RISKS OF PRODUCT FAILURE BETWEEN MICHAEL TODD BEAUTY AND YOU, THE END USER. THIS ALLOCATION IS RECOGNIZED BY BOTH PARTIES AND IS REFLECTED IN THE PRICE OF THE PRODUCT. BY USING SONICLEAR ELITE YOU ACKNOWLEDGE THAT YOU HAVE READ THESE TERMS, CONDITIONS AND LIMITATIONS, UNDERSTAND THEM AND ARE BOUND BY THEM.

SOME STATES DO NOT ALLOW LIMITS ON WARRANTIES, OR ON REMEDIES FOR BREACH IN CERTAIN TRANSACTIONS. IN SUCH STATES, THE LIMITS CONTAINED HEREIN AND THE DISCLAIMER OR EXCEPTIONS FROM WARRANTY MAY NOT APPLY. IF APPLICABLE LAW DOES NOT PERMIT THE DISCLAIMER OF IMPLIED WARRANTIES, THEN THE DURATION OF SUCH IMPLIED WARRANTIES, ARE EXPRESSLY LIMITED TO THE DURATION OF THE EXPRESS LIMITED WARRANTY SET FORTH HEREIN.

PRODUCT CHANGES. MICHAEL TODD BEAUTY reserves the right to make changes and improvements to its products without incurring any obligation to incorporate such improvements in products previously sold or to notify you of these changes or improvements.

DISPUTES. This limited warranty is governed by the laws of the State of Florida, without regard to principles of conflicts of laws, and applicable United States federal law. The United Nations Convention on Contracts for the International Sale of Goods shall not apply. YOU AGREE TO SUBMIT ANY CLAIM, DISPUTE, OR CONTROVERSY (REGARDLESS OF THE FORM OR TYPE OF ACTION) AGAINST US TO ARBITRATION ADMINISTERED BY THE NATIONAL ARBITRATION FORUM UNDER ITS CODE OF PROCEDURE THEN IN EFFECT (available at <http://www.arb-forum.com> or via telephone at 1-800-474-2371). Except to the extent otherwise required by law, you agree that the arbitration proceedings will take place exclusively where the principal office of MICHAEL TODD BEAUTY is located at the time of institution of the proceedings. You may be entitled to file suit under state laws without submitting your claim to arbitration first. Information on arbitration may be obtained from, and a claim may be filed with, the National Arbitration Forum at P.O. Box 50191, Minneapolis, MN 55405-0191 USA.

Distributed by Michael Todd Beauty LP

Port St Lucie FL 34953

For more information, updates, reviews frequently asked questions and more visit us on the web at www.michaeltoddbeauty.com

Cleaner skin begins with a cleaner brush, soniclear *elite* and C-BOOST™ are either registered trademarks or trademarks of MICHAEL TODD BEAUTY LP

LIFE antimicrobial product protection is a registered trademark of LIFE Materials Technologies Ltd

© 2017 MICHAEL TODD BEAUTY LP. All rights reserved.



